


## 1 CHECK SHOCK AND INCLINATION DETECTORS



Before accepting the reception, check the status of the shock and inclination detectors.  
Check also the general status of the wooden box.


Inform in case of any detector is activated.

## 2 LIFT THE TOP WOODEN PANEL

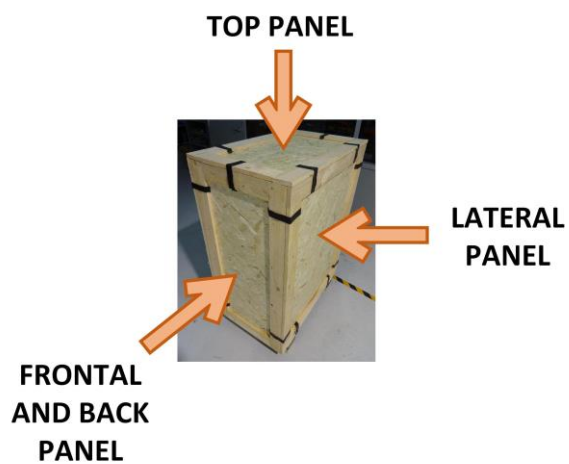

Remove the 6 metallic clips from the top panel (a screwdriver is recommended)

Lift the top wooden panel

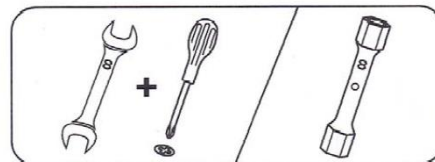

## 3 REMOVE THE FRONTAL AND BACK PANELS



Follow the same procedured described at point 2; remove the 4 metallic clips and remove the 2 front and back wooden panels.  
Behind the frontal panel there is the ramp to take down the equipment from the pallet

## 4 REMOVE THE WOODEN RAMP







The ramp is located in the front part of the equipment. This ramp will be used to take down the converter from the pallet.  
The converter has wheels to help with the movements.  
There are nails to fix the ramp in the pallet in the internal part of the ramp.  
Match the number written in the pallet with the one in the ramp.



The equipment must not take down from the pallet without control.

## 8 TAKE DOWN EQUIPMENT FROM THE PALLET

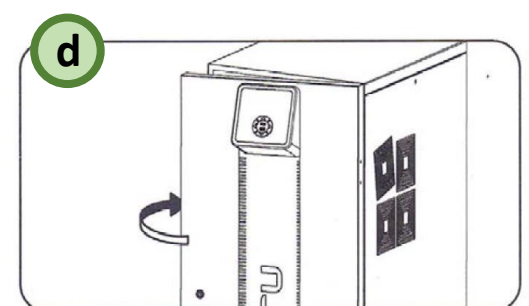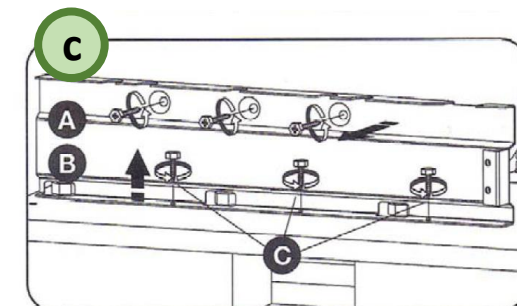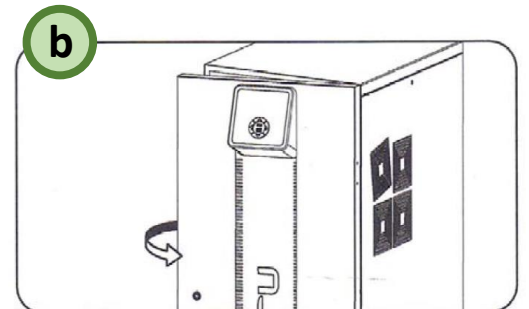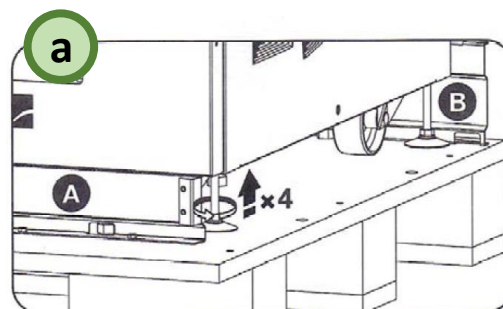

Once the part (d) is accomplished (close equipment's door), take down the converter from the pallet using the wooden ramp. Proceed with the help of other person.


## 5 REMOVE THE LATERAL PANELS

Remove the other 2 metallic clips from each lateral panels and remove these panels.



Caution: hold the lateral panel during the procedure to avoid personal damages

## 6 UNPACK THE EQUIPMENT AND REMOVE THE WHITE PROTECTIONS

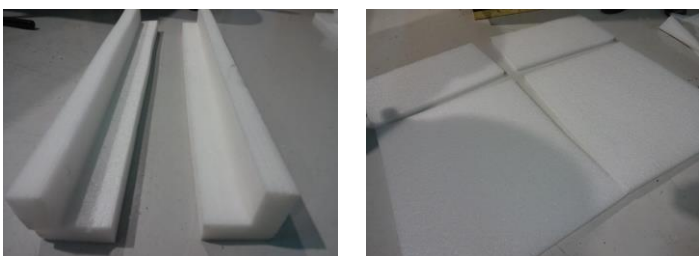

## 7 REMOVE THE WOODEN ELEMENTS

Remove the wooden elements which fix the equipment to the pallet beside the wheels.  
To proceed, unscrew the 2 screws.



It is necessary to do all the steps described above with the help of another person.



Keep the original wooden package safe.



Contact CINERGIA in case of any doubt